


1) Before Install

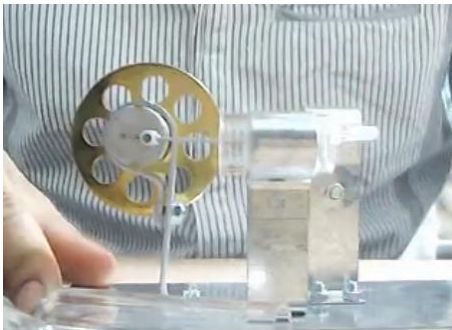

2) 2、 3)


Connect the linkage of Cylinder piston ⑥ to small bent axle ⑧, then adjust the cylinder piston of the installation




4) adjust heating cylinder ④, let the piston work well.



5) Connect the heating cylinder ④ to big bent axle ⑨.

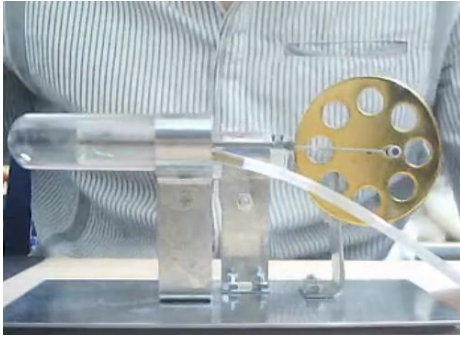

6) Connect the hose of heating cylinder to the needle hole^⑩.

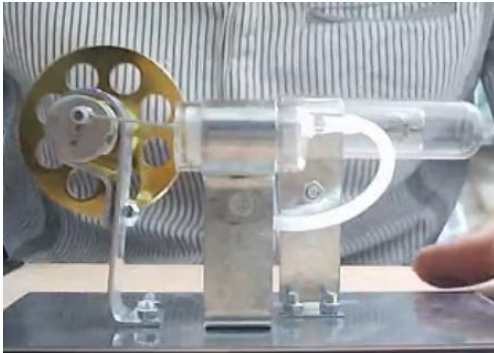

7) Add alcohol to alcohol lamp^⑦, then light up



8) After 30 minutes, let the big bent axle^⑤ run by manual operation, then the whole engine runs well.

