


1 Structure diagram

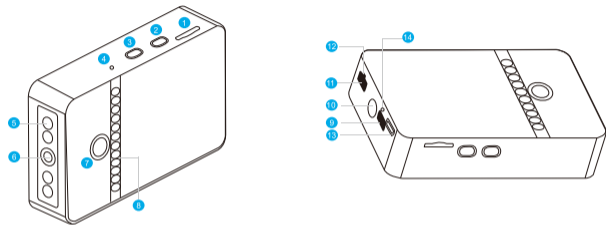

- ① Micro SD Card slot
- ② Power/REC button
- ③ Mode button
- ④ Mic
- ⑤ 5mm IR lights*4pcs
- ⑥ Lens 1 (Lens S)
- ⑦ Lens 2(Lens B)
- ⑧ 3mm IR Lights*11pcs
- ⑨ Lens 1/Lens 2 switch
- ⑩ 1/4" Tripod mount
- ⑪ IR Lights switch
- ⑫ Led indicator
- ⑬ Micro USB slot
- ⑭ Reset

Package contents:

- 1x Dual lens camera
- 1x Mounting Base
- 1x Rearview mirror holder
- 1x Tripod
- 1x USB cable
- 1x Carrying bag
- 1x User manual

2 Specifications

Chipest	Generaplus 1247
Cmos sensor	1/4" GC1024
Angle of View	62°for Lens 1;120°for lens 2
Video resolution	1920*1080p 30fps
Codec format	MJPEG
Video format	AVI
Photo resolution	1280*960p
Photo format	JPG
Interface:	Micro USB(USB2.0)
Memory Card:	Supports Micro-SD memory card (not includes). Max. Suggest C10 32GB card supports
LED indicator light:	Red, Blue
Ir lights:	4pcs 5mm ir lights for lens 1;11pcs 3mm ir lights for lens 2
Loop recording:	Supports
Recording when Power charging:	Supports
Internal lipo battery:	2400mah,about 13 hours video recording
Power Input:	Standard USB DC 5V
Dimensions:	85mm(L)*53mm(W)*20mm(H)
Net weight:	88 grams only , with battery includes

3 Function introduction

Turn ON/OFF Camera

Press and hold the Power Button for 3 seconds until the blue LED turns on.

The camera will then turn on.

Press and hold the Power Button for 2 seconds until the blue LED flashes.

The camera will then turn off.

Start/Stop video recording

Press the Power/REC button to start or stop recording

Switching between modes

There are 3 working modes:Video Mode,Voice Mode,Photo Mode.

The camera can be switched between 3 working modes by pressing the Mode button;

Camera takes video recording automatically after power on,press Power/REC button to stop recording;Press mode button once to switch photo mode;

Press and hold mode button for 2 seconds to switch voice recording mode;

Video Mode,Red Led indicator is always on for standby mode,red Led indicator flashes for video recording mode;

Voice Mode,Red Led indicator is always on for standby mode,blue Led indicator flashes for voice recording mode;

Photo Mode,Red Led indicator is always on for standby mode,red LED indicator flash once when a picture was taken.

Motion detection mode

The camera starts video recording automatically after power on,press Power/REC button to stop recording;And then,press Power/REC button twice to switch motion detection mode.

Red Led indicator is always on for standby mode,no any LED indicator flash for video recording mode;

Lens 1/Lens 2 switch

After camera power on,we can not switch lens during recording mode,only works for standby mode;

After camera power off,we can switch lens at random!

Ir lights

After camera power on,we can not switch ir lights on or off during recording mode,only works for standby mode;

After camera power off,we can switch lights on or off at random!

Reset camera

The Reset button should only be pressed in case the camera no longer reacts to button presses.

Pressing the Reset button will force the processor to restart.

Format memory card

Prepare one Micro SD Card for camera,and card can be formatted as FAT32 by your computer;

Camera will not work with other formats,never use external programs to format the card while it is in the camera.

Connection with computer for video download and for battery charging

The camera uses a micro USB connector.

The connector is compatible with all standard USB2.0 cables for USB data transfer and charging

Camera Time setting Setup

Find this time.txt file in memory card,and correct its default date/time setting to your local time,then save and exit;

Power on camera and its time will be updated automatically.