

# QUICK START GUIDE

## TINNY THUMB-SIZE 1080P CAMERA RECORDER



### 7. Continuous Video Recording

- 1). Slide FHD/HD switch to the preferred resolution.
- 2). Slide REC/MD switch to Rec position.
- 3). Shortly press Power On/Off key to start continuous video recording.
- 4). Yellow LED blinks 3 times then go out to indicate continuous recording.
- 5). Gently press Power On/Off key again, yellow LED go out to indicate, continuous recording stop status.

### 8. Motion detection recording

- 1). Slide FHD/HD switch to the preferred resolution.
- 2). Slide REC/MD switch to MD position.
- 3). Shortly press Power On/Off key to start motion detection recording.
- 4). Blue LED blinks 3 times then go out to indicate motion detection recording.
- 5). Slide the REC/MD switch to REC position to stop motion detection recording.

### 9. Date and Time Setting (for Windows Operating System)

- 1). Plug the unit into the computer USB port, a new removable disk will appear on the computer screen. Format the disk at first time you use.
- 2). Create a .txt file with the name "SYSCFG" to the root/main directory of the Micro SD card.
- 3). Write the time and date into the "SYSCFG" file, hours must be 24-hour/military format:

2017-04-20 10:43:00 Y  
 Year Month Day Hour Minute Second (Space) Y=With time/date stamp  
 N=Without time/date stamp

- 4). Save and close the time file, remove the micro SD card from computer, insert it into the camera and power on the camera. The new time/date settings will be applied to new recorded videos.

NOTE: If the time process is completed successfully, the "SYSCFG" file will disappear from the micro SD card.

4


### 10. Reset

When the unit is not working properly due to illegal operation or other unexplained reasons, the product needs to be reset. The specific method of operation is: with a reset pin directly press the reset button, you can achieve a reset operation.



### 11. Reviewing Files on a Computer

Method 1. Connect the device with computer by USB cable directly.

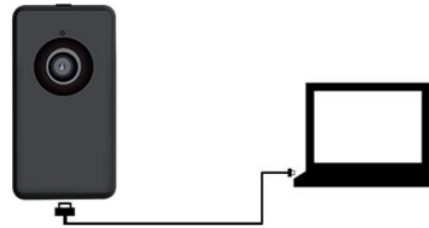

Method 2. Take out the micro sd card from the device, then insert to card reader connect with PC.



5

### 1. Introduction



### 2. Package Content



1

### 3. Charging Battery

This unit has a built-in rechargeable lithium battery. When using the unit for the first time, please charge it. MINI DV can be charged in the following ways:

- 1). Connect the computer to charge, use the USB data cable to connect the computer, then you can charge.



- 2). Use a charger to charge, make the USB data cable connected with the charger seat and insert the charger into the electrical outlet, then you can charge.



Notes: The device support charging while recording!

### 4. Inserting Micro SD card

- 1). The device support storage 8GB-32GB Micro SD card.
- 2). Insert micro SD card gently into card slot on the side.
- 3). Ensure insertion placed in proper direction as indicated.
- 4). To eject the card, gently push and release the card.



2

### 5. Covert Application



### 6. LED indicator

Power on	Hold Power On/Off Key about 3 seconds	Blue and yellow LED solid
Power off	Hold Power On/Off Key about 3 seconds	Blue and yellow LED blink 3 times and goes off
Continuous recording	Sliding the REC/MD switch to REC position, then turn on the camera	Yellow LED blinks 3 times and goes off
Stop continuous recording	Gently press Power On/Off Key	Yellow LED on
Motion detection	Sliding the REC/MD switch to MD position	Blue LED blinks 3 times
SD card cannot be recognized		Yellow LED blinks quickly

3